




Nintendo Wii Remote Speaker Replacement

How to remove the speaker from the Nintendo Wii Remote.

Written By: Emily

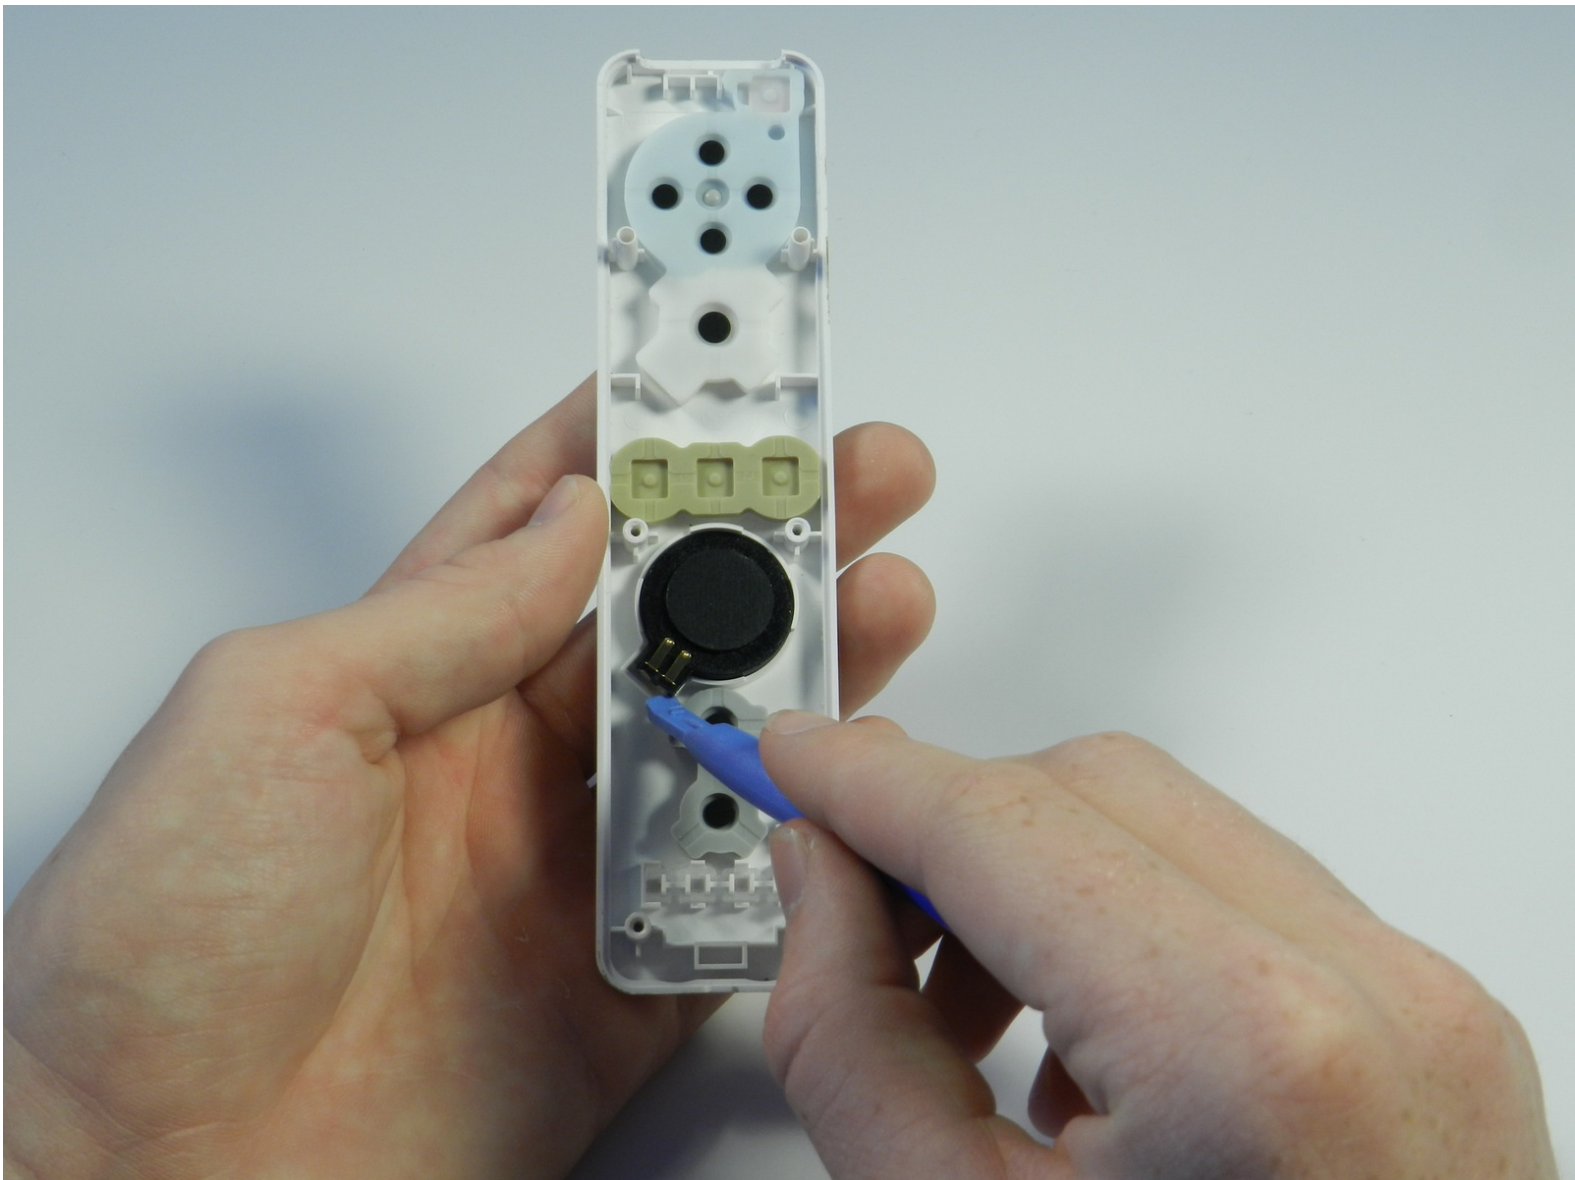

INTRODUCTION

Removing the speaker requires opening the case of the Wii Remote.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Y1 Tri-wing Screwdriver](#) (1)
-

Step 1 — Front Cover Plate and Batteries



- Flip the Wii Remote over so the battery cover faces you.
- Push up on the bottom tab.
- Remove the battery cover.

Step 2




- Remove the first battery by pressing down on the positive end and pulling the battery out.
- Remove the second battery by pushing up on the positive end and pulling the battery out.

Step 3






- Using a Tri-wing Y1 Screwdriver, remove the two center 7mm screws by turning them counterclockwise.
- Repeat with the two bottom screws.

Step 4

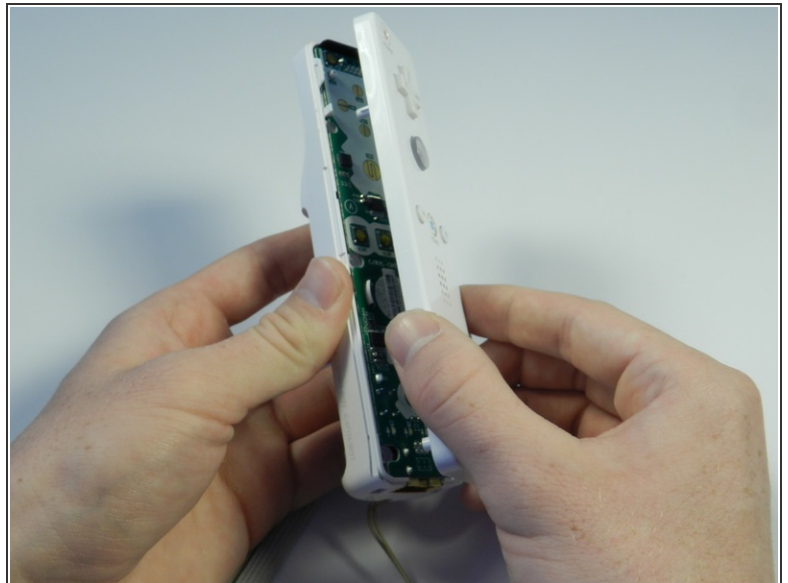

- With the flat end of a spudger, gently apply pressure to the tabs located on left side of the controller.
 - ⓘ These tabs are breakable. However, if the tabs are broken the controller will still function.
- Open the front plate like a book.
 - ⚠ Small parts may fall out as you open the front plate.

Step 5 — Speaker

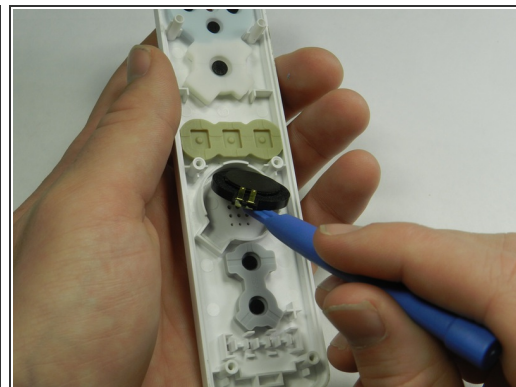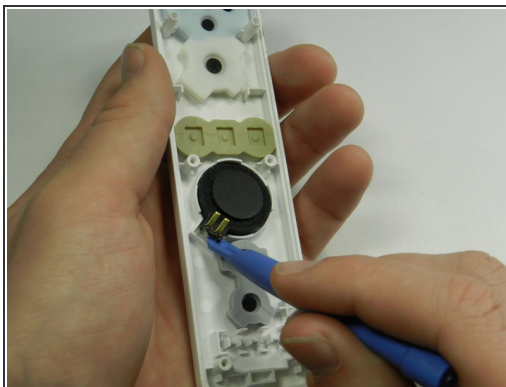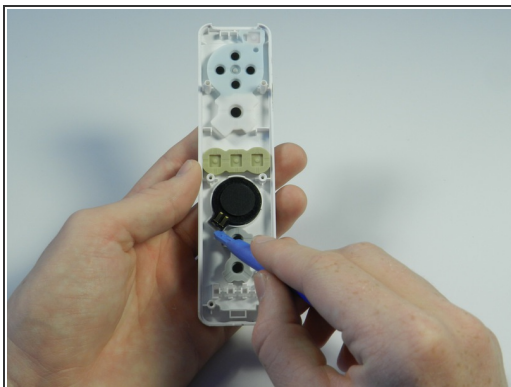

- Place the plastic opening tool between the edge of the speaker and the wii remote.
- Gently lift the speaker out of the body of the Wii remote.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 02:20:33 PM.